


## Confirming a True Arch Radius Without templating

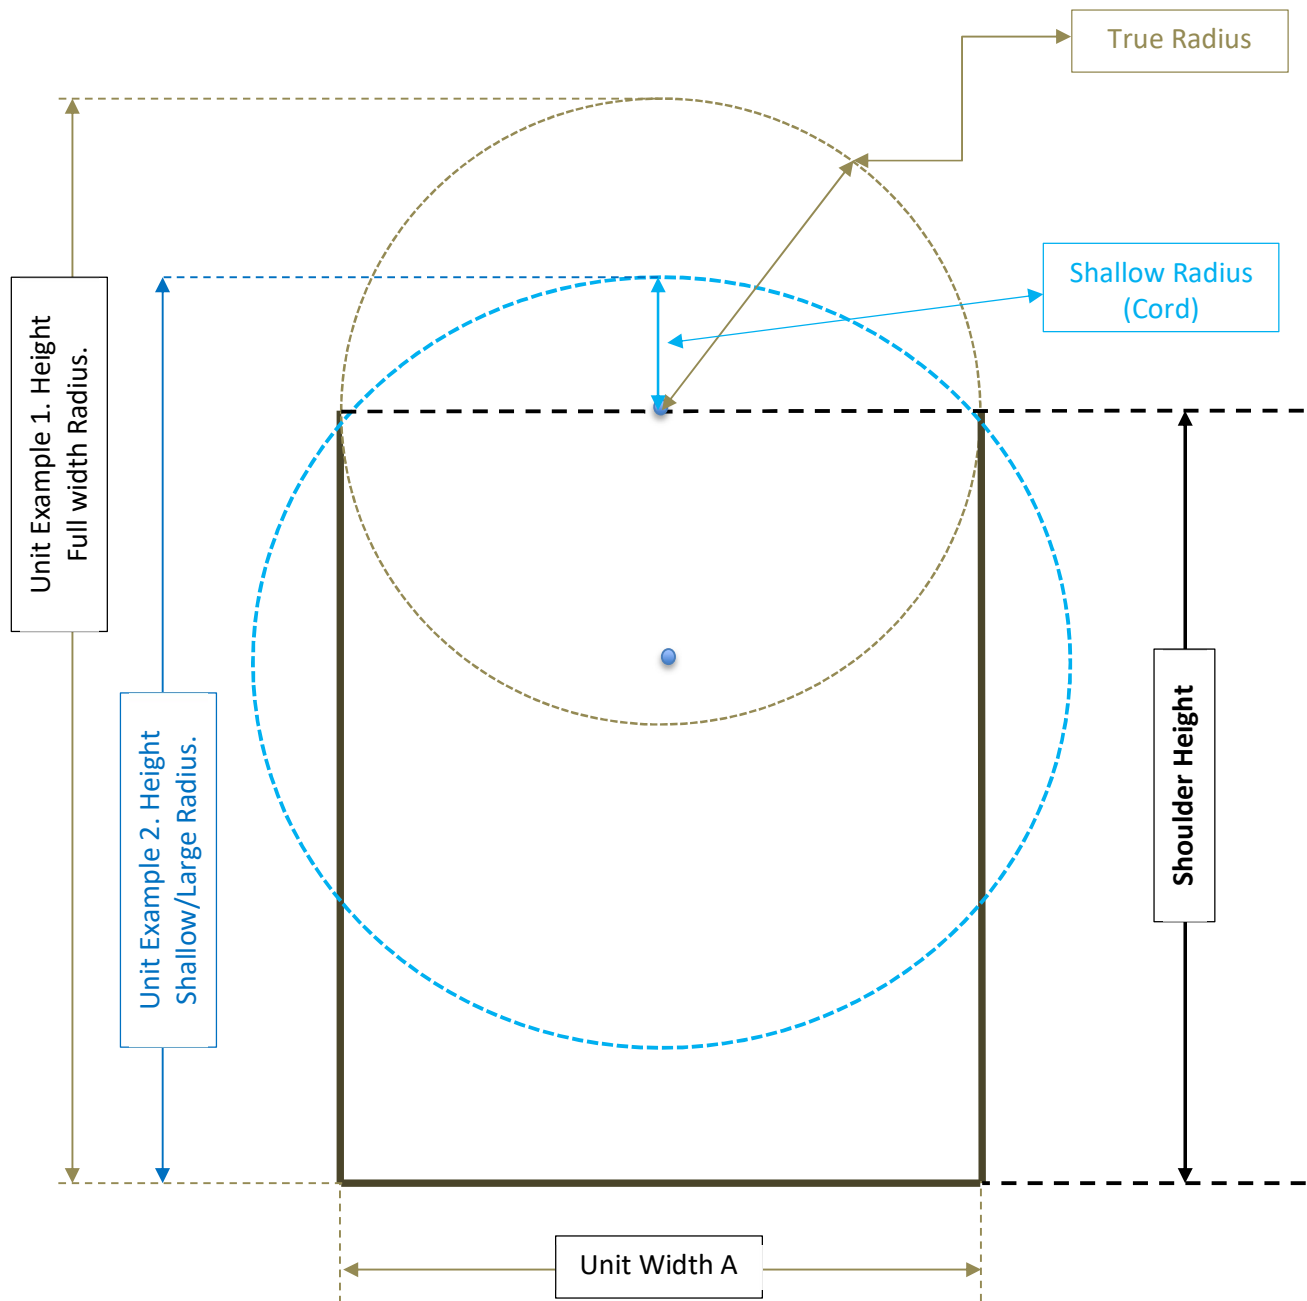

### Shoulder Height

From base sill to point where the arch starts.

True Radius: height from shoulder to top of arch = half width

Shallow Arch: from shoulder to top of arch = Cord Height x Total Width (Radius Formula Calc).

Allow Tolerance Deductions as per recommended guidance.

If the arch has some distortion, ensure sufficient tolerance is applied to fit, the trim supplied can be cut and scribed to accommodate and hide/seal the distortions